



CLASSICPAR 36

SLI-CLPA36

.....

.....

100-240 , 50-60 ;

!

!

!

•

•

•

•

•

0,5

•


•

: 40°C

- : 100 ~240 , 50 ~60
- : 44
- : 8 * 4- -1 8 RGBW
- : 25°
- : IP20
- DMX : 7
- : 185* 185 * 270
- : 3,16
- : 4,53



- DMX XLR
- /
- 10-
- 7 DMX
- RGBW DMX512
- 5 : Auto Program, Color Macros, DMX512, Auto Sound, Slave

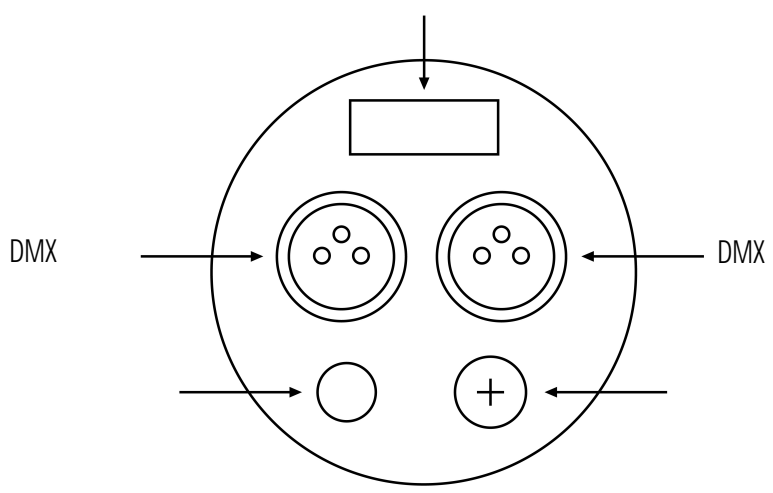

- 1.
- 2.
- 3.
- 4.
- 5.

0,5

		3
		2
/		1



DMX 512

DMX512

Input () Output ()

XLR (1, 2, 3).

100

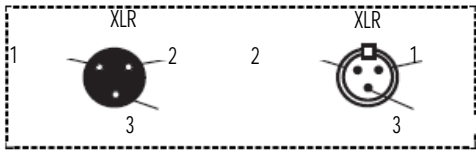

	XLR
1 =	
2 =	
3 =	

3

1 Slave ():

1	2	3	4	5	6	7	8	9	10	OFF
										ON

slave,

(master)

Sound Active ()

Fixed Color ()

DMX,

AUTO (),

DMX

1	Red ()	OFF ()
2	Green ()	OFF
3	Blue ()	OFF
4	White ()	OFF
5	Dimmer1 (1)	OFF
6	Dimmer2 (2)	OFF
7	Sound ()	OFF
8	Auto ()	OFF
9	Slave ()	ON ()
10	Master ()	ON

2 AUTO ()

1	2	3	4	5	6	7	8	9	10	OFF
										ON


8 10

ON (),

1 2.

4 Static Colour ()

A:Red ()

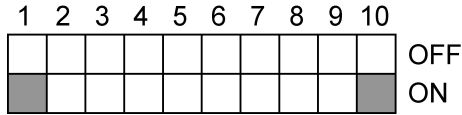


1 10 ON(),

5 6.

1	Red ()	ON	
2	Green ()		OFF
3	Blue ()		OFF
4	White ()		OFF
5	Dimmer1 (1)	ON	
6	Dimmer2 (2)	ON	
7	Sound ()		OFF
8	Auto ()		OFF
9	Slave ()		OFF
10	Master ()	ON	

B:Green ()

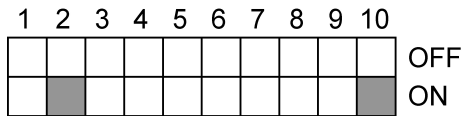


2 10 ON(),

5 6.

1	Red ()		OFF
2	Green ()	ON	
3	Blue ()		OFF
4	White ()		OFF
5	Dimmer1 (1)	ON	
6	Dimmer2 (2)	ON	
7	Sound ()		OFF
8	Auto ()		OFF
9	Slave ()		OFF
10	Master ()	ON	

C:Blue ()

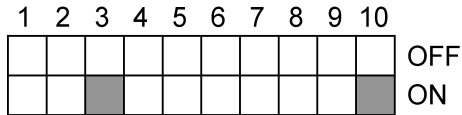

3 10

ON (),

5 6.

1	Red ()		OFF
2	Green ()		OFF
3	Blue ()	ON	
4	White ()		OFF
5	Dimmer1 (1)	ON	
6	Dimmer2 (2)	ON	
7	Sound ()		OFF
8	Auto ()		OFF
9	Slave ()		OFF
10	Master ()	ON	

D:White ()

1	2	3	4	5	6	7	8	9	10

OFF
ON

4 10

ON (),

5 6.

1	Red ()		OFF
2	Green ()		OFF
3	Blue ()		OFF
4	White ()	ON	
5	Dimmer1 (1)	ON	
6	Dimmer2 (2)	ON	
7	Sound ()		OFF
8	Auto ()		OFF
9	Slave ()		OFF
10	Master ()	ON	

5 DMX

1	2	3	4	5	6	7	8	9	10

Address 1 2 4 8 16 32 64 128 256

OFF
ON

10

OFF (),

DMX

1-9.

DMX -

1 512.

ON ().

:

1,4 6

" "

1 + 8 + 32 = 41.

3,7 9

" "

4 + 64 + 256 = 304.

		DMX
1	ADDR1 (1)	1
2	ADDR2	2
3	ADDR3	4
4	ADDR4	8
5	ADDR5	16
6	ADDR6	32
7	ADDR7	64
8	ADDR8	128
9	ADDR9	256
10	Master	OFF


DMX

ch1	0--255	dimmer [] (0%--100%)
ch2	0--255	red [] (0%--100%)
ch3	0--255	green [] (0%--100%)
ch4	0--255	blue [] (0%--100%)
Ch6	0--255	white [] (0%--100%)
Ch6	0--255	Strobe/auto speed(slow -- fast) [/ -]
Ch7	0 --15	
	16--37	Program 1 (1)
	38--60	Program 2
	61--83	Program 3
	84--106	Program 4
	107--129	Program 5
	130--152	Program 6
	153--175	Program 7
	176--198	Program 8
	199--221	Program 9
	222--244	Sound Active 1 [1]
	245--255	Sound Active 2 [2]

•
•

1. CE
EMC (2004/108/CE), CE (93/68/EEC)
(2006/95/EC).
2. « » WEEE (
) (2002/96/EC).
3. «RoHS compliant» (2002/95EC)

24-10-2012 /





/

